





Pituus
2430 mm




Korkeus
2695 mm

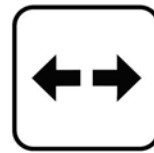

Leveys
1390 mm

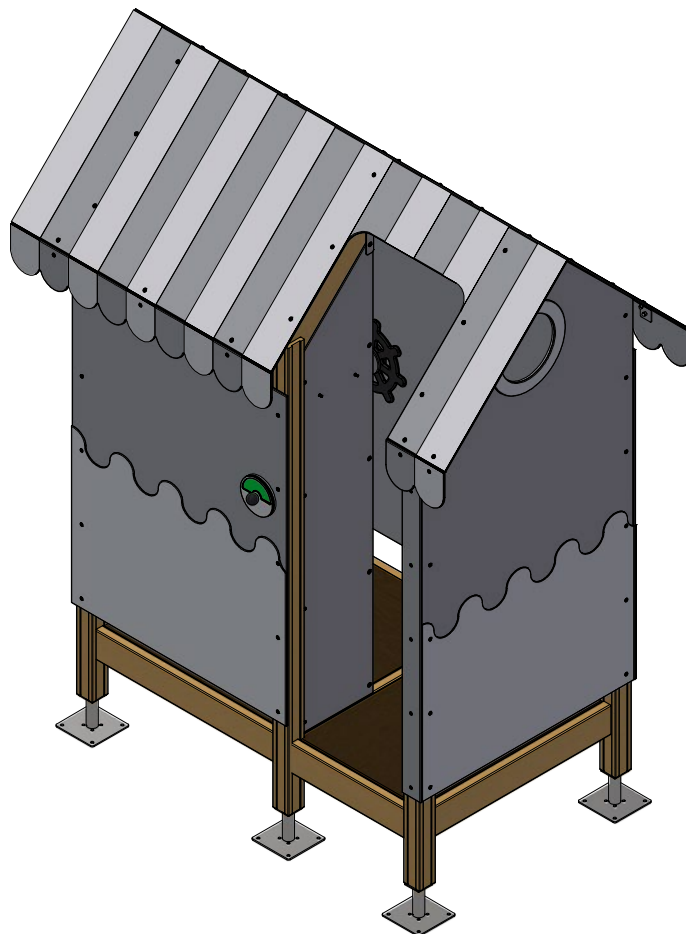

Mitat


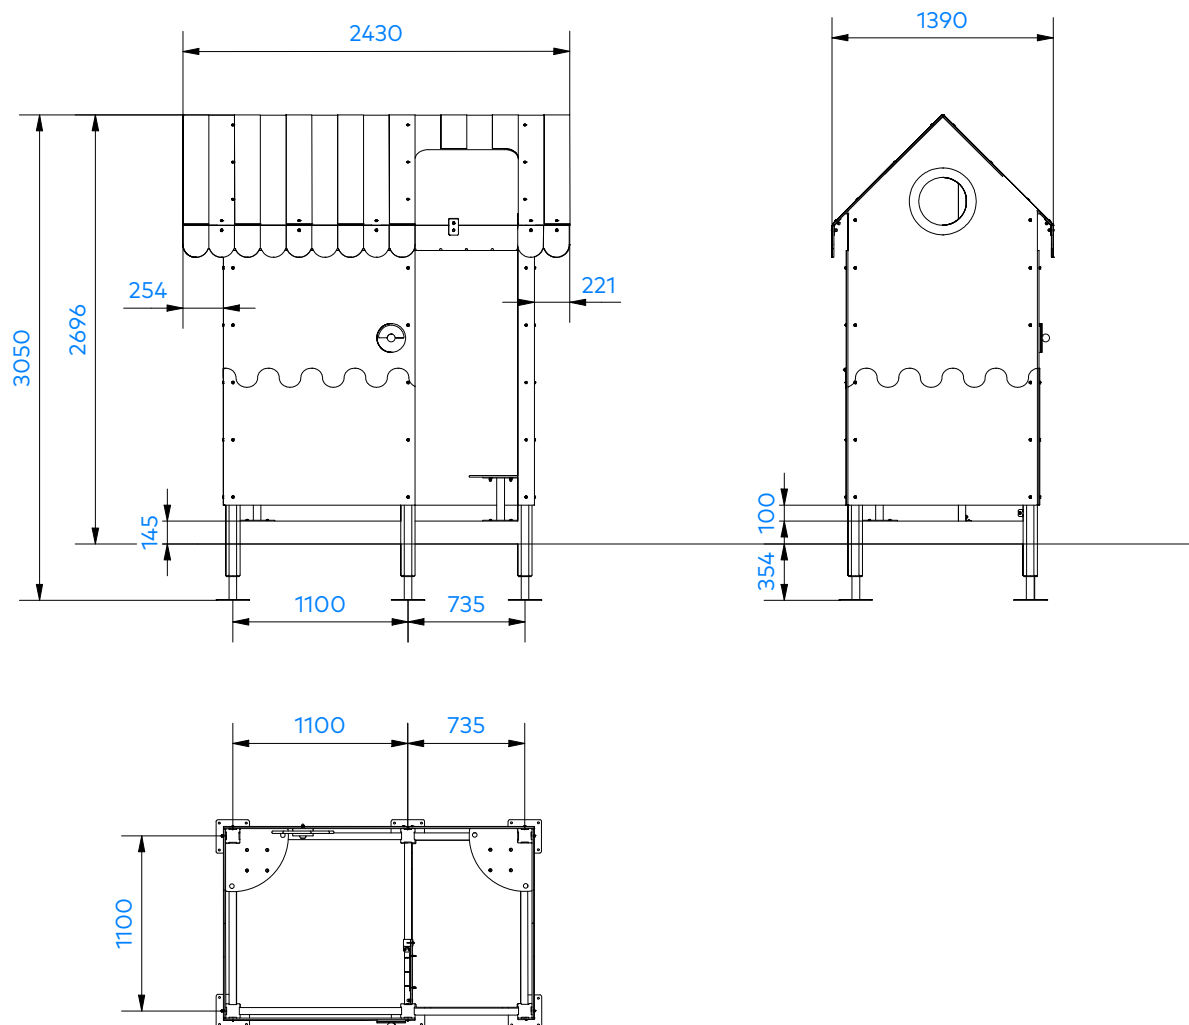


Osaluettelo

M00140	5	M00164	1	M00060	1	M00236	2	M00057	6	M00514	1	M00736	3	M00515	1	PU-00020	6
																	
M00733	1	M00757	1	M00758	1	M00759	1	M00728	1	M00729	2	M00727	1	M00726	1	M00717	1
																	
M00718	1	M00719	1	M00721	1	M00713	1										
																	


Tasopuun asennus

M00140, M00236

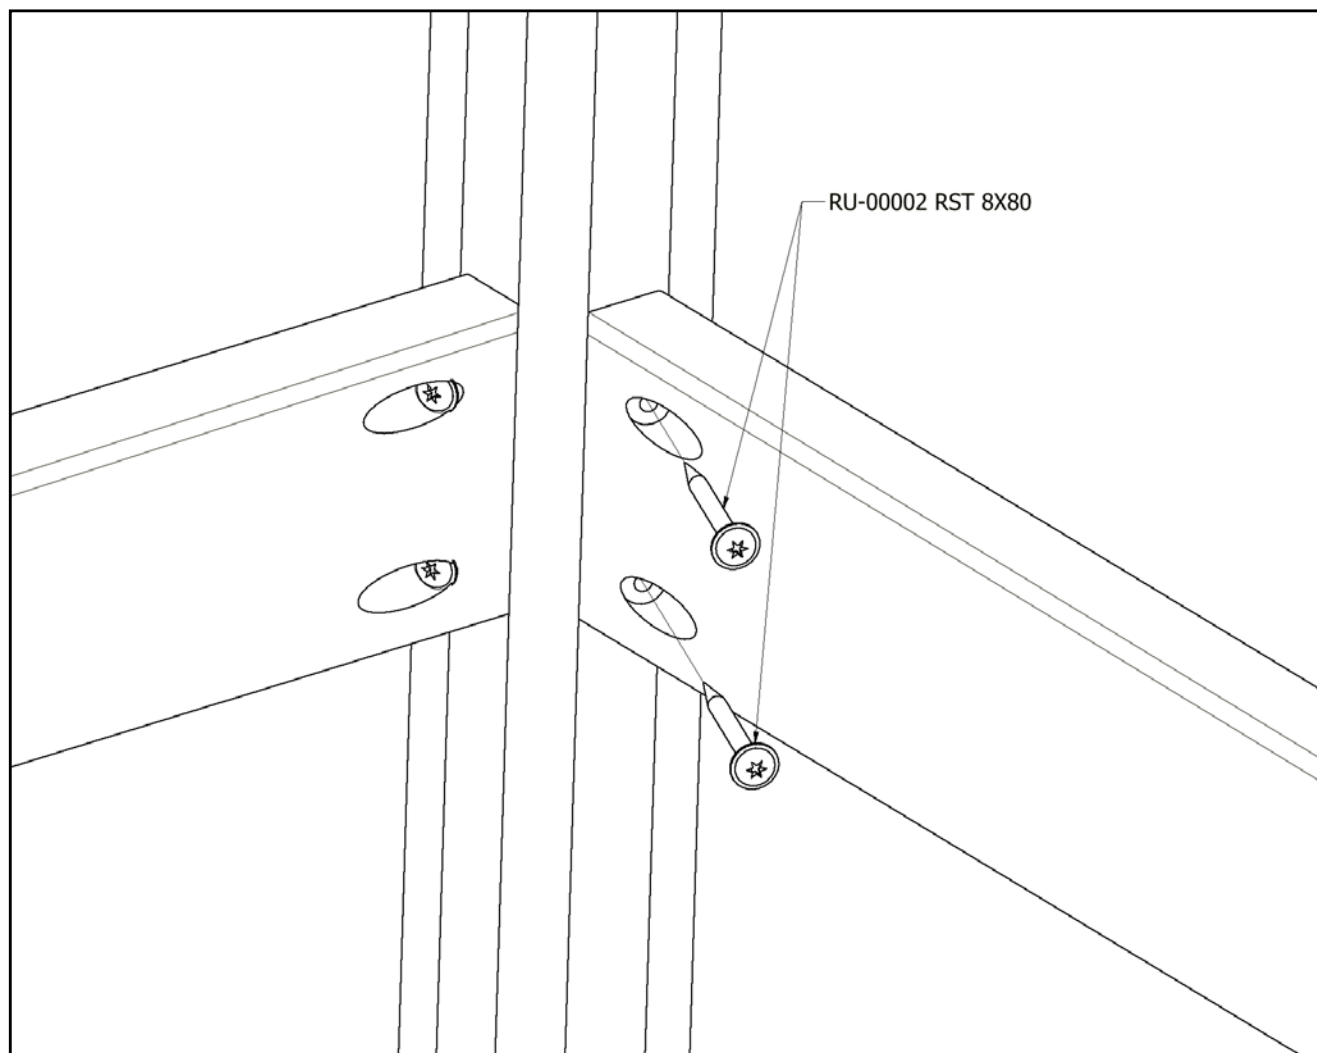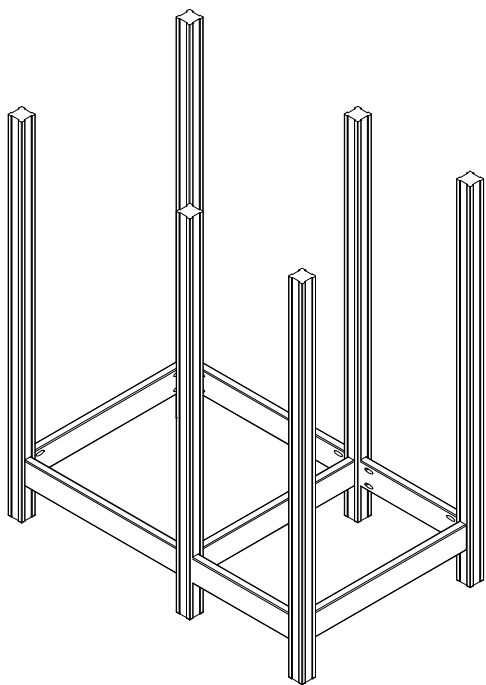


Kattotuolien asennus

M00736


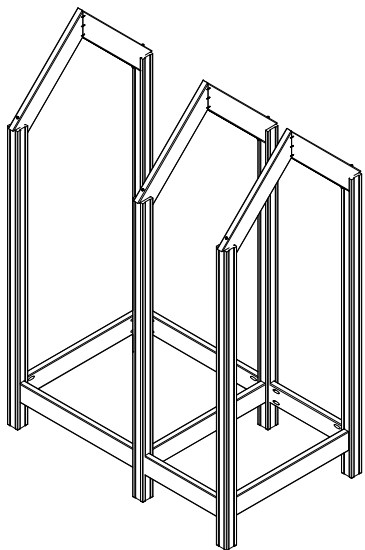


RU-00007
6x80mm

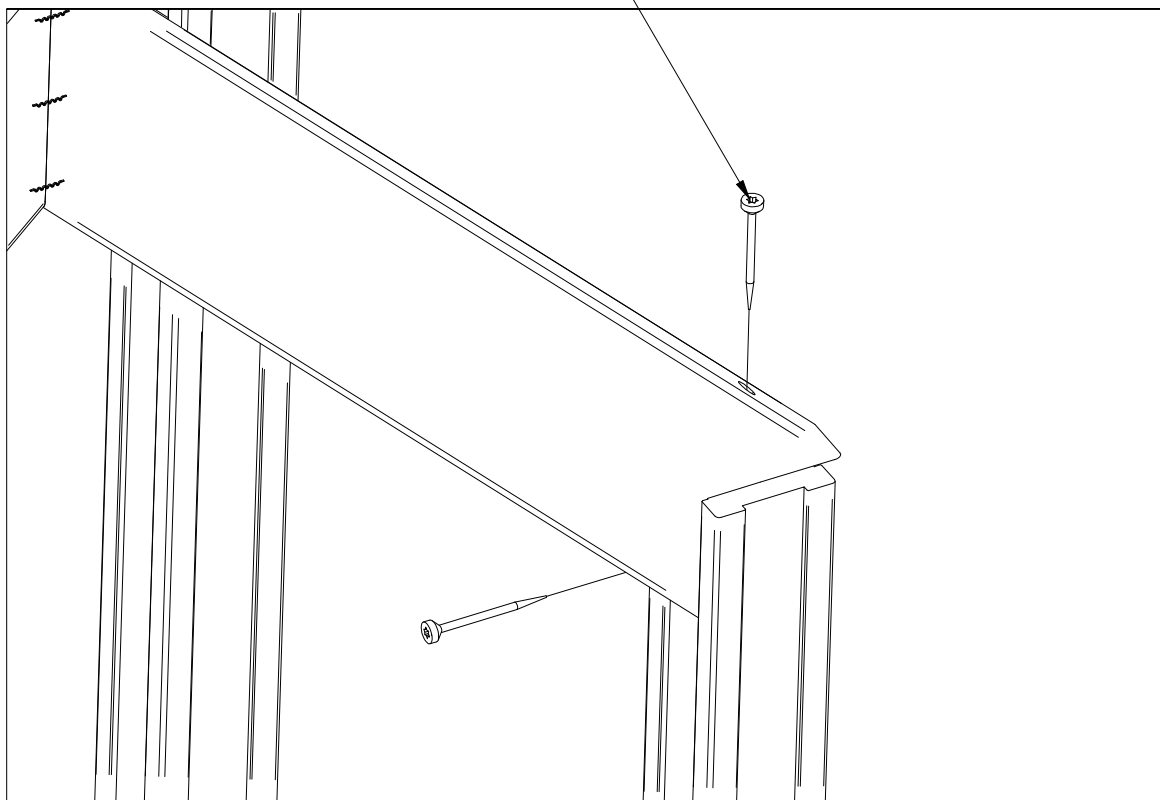

Lattiavanerin asennus

M00164, M00060, M00514

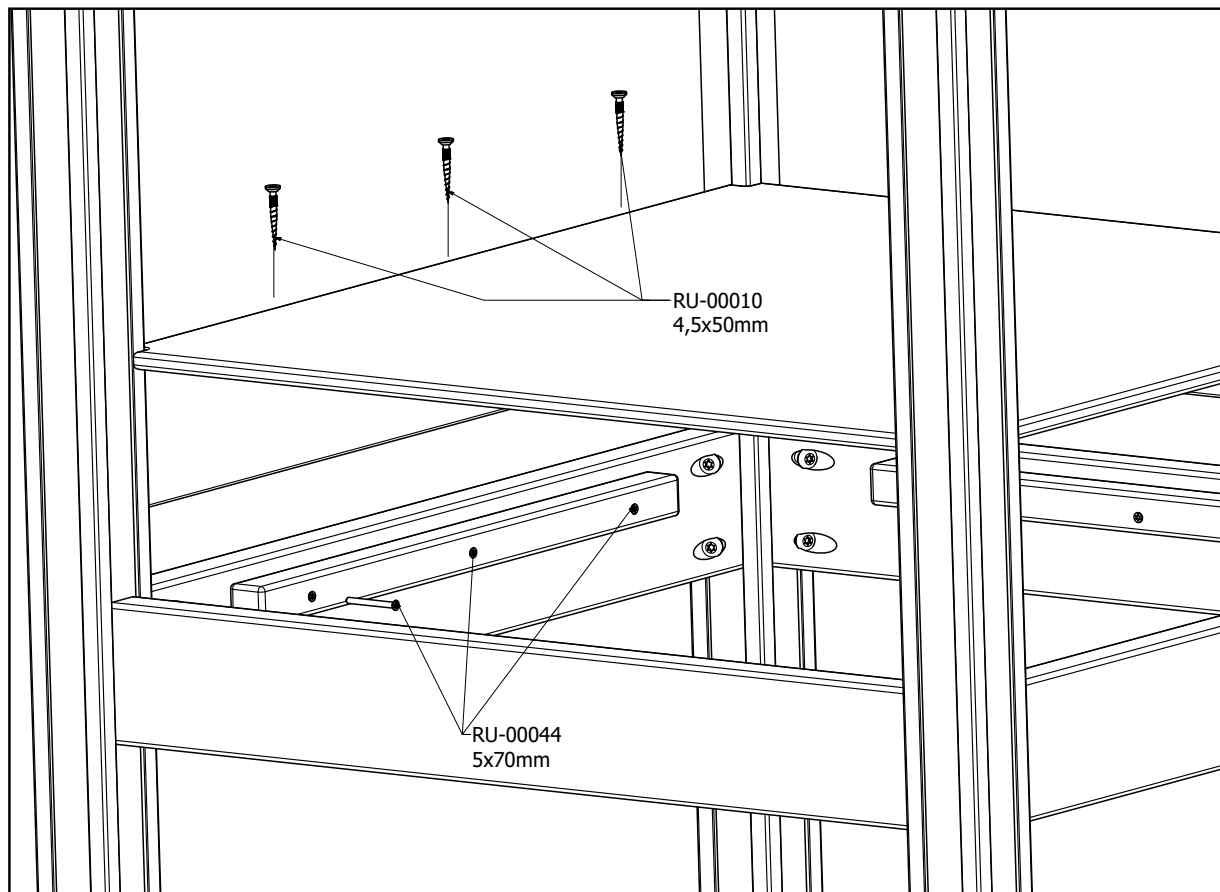
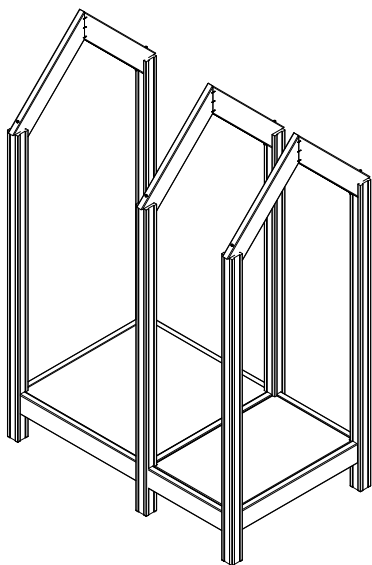


Käytettävä
esiporausta

Kiinnikerimat 4 kpl
asennetaan niin,
että riman ja taso-
puun yläpintojen
erotus on
18 mm.

Ulkoseinien asennus

M00717, M00718, M00719, M00757, M00758

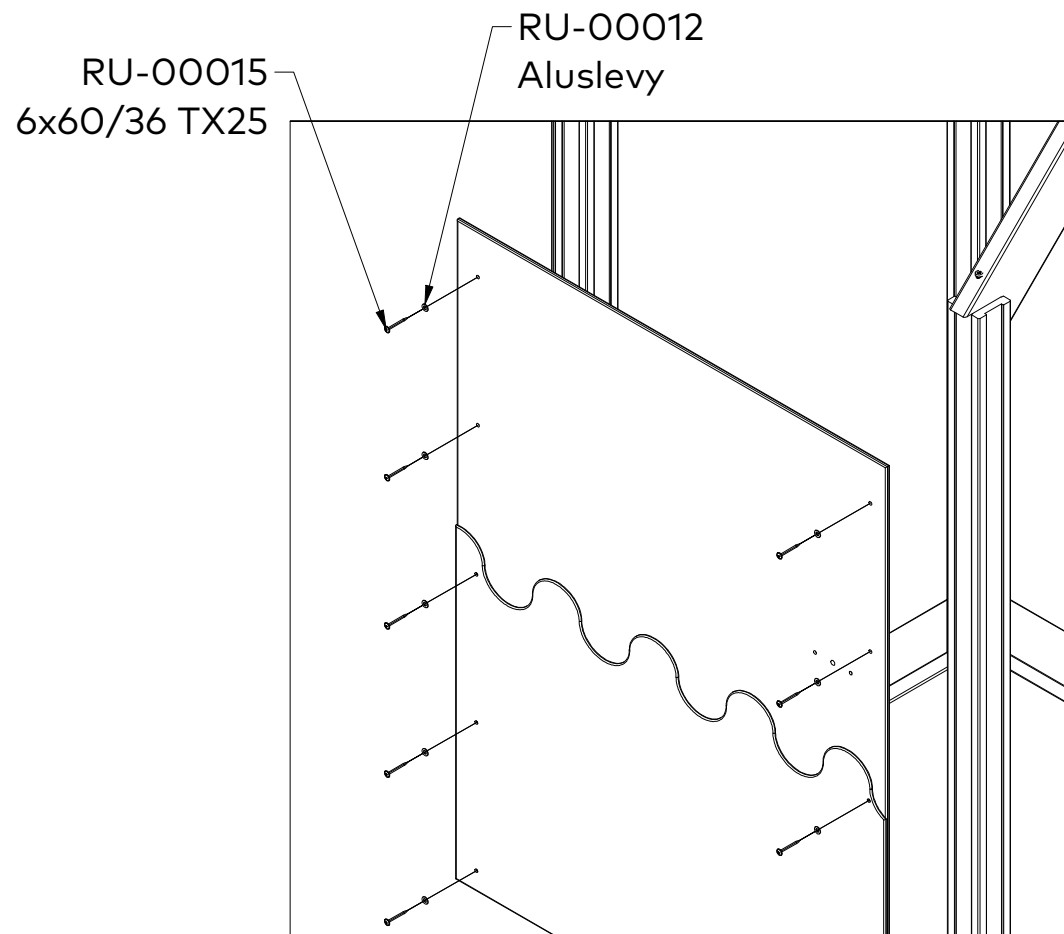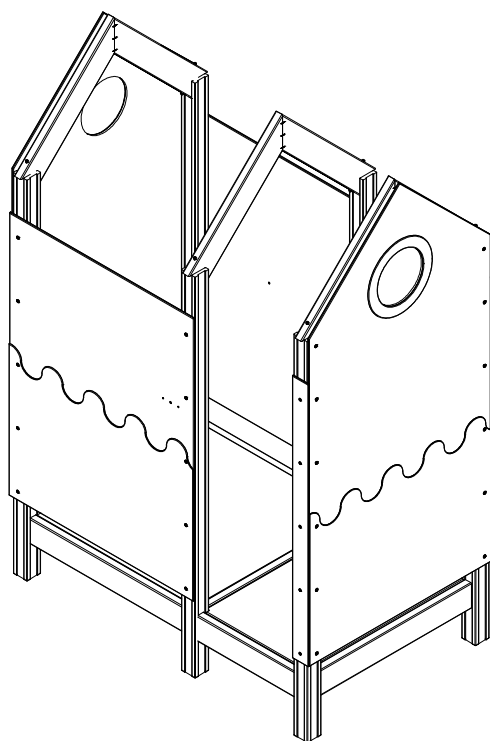



HPL-seinän ja
tason väliin tulee
jäää 100 mm.
Käytä asennuspalikkaa.

Takaseinien asennus


M00757, M00758

HUOM Takapaneelit!


Asenna vasemman puoleinen seinämä ensin,
jotta isompi paneeli voidaan kohdistaa kielekkeen avulla.

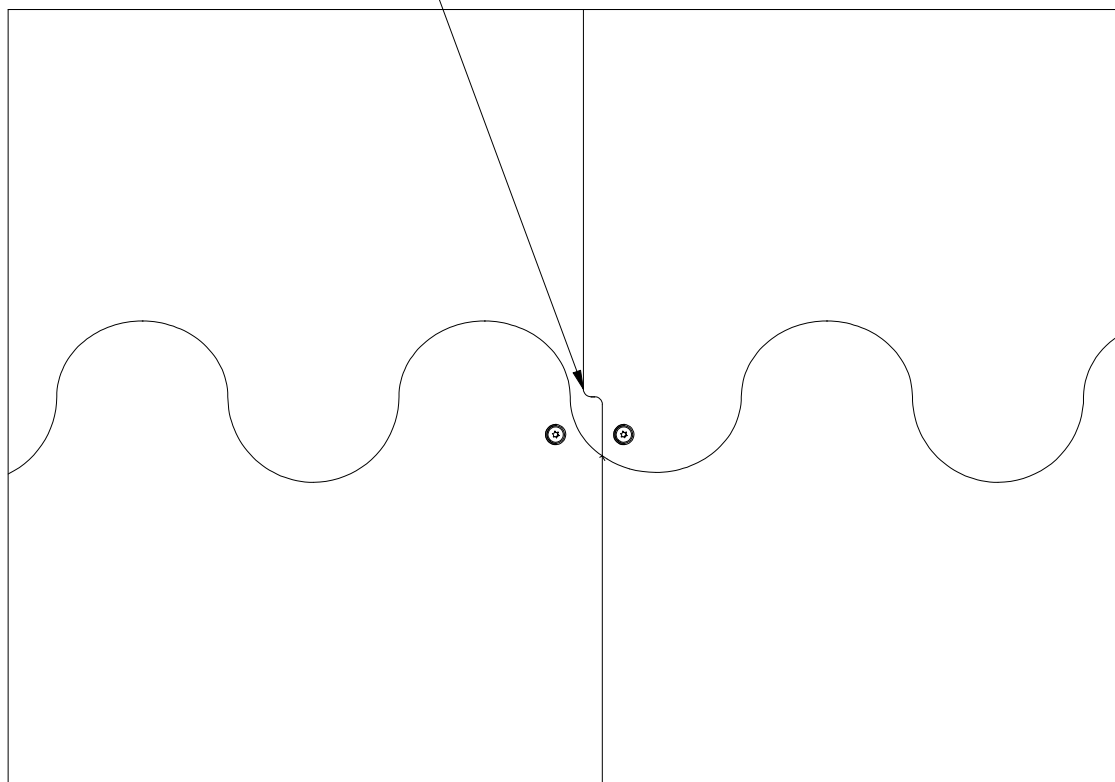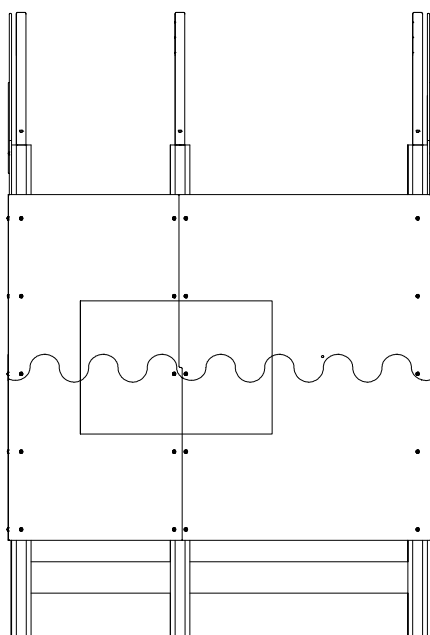



Ruorin asennus

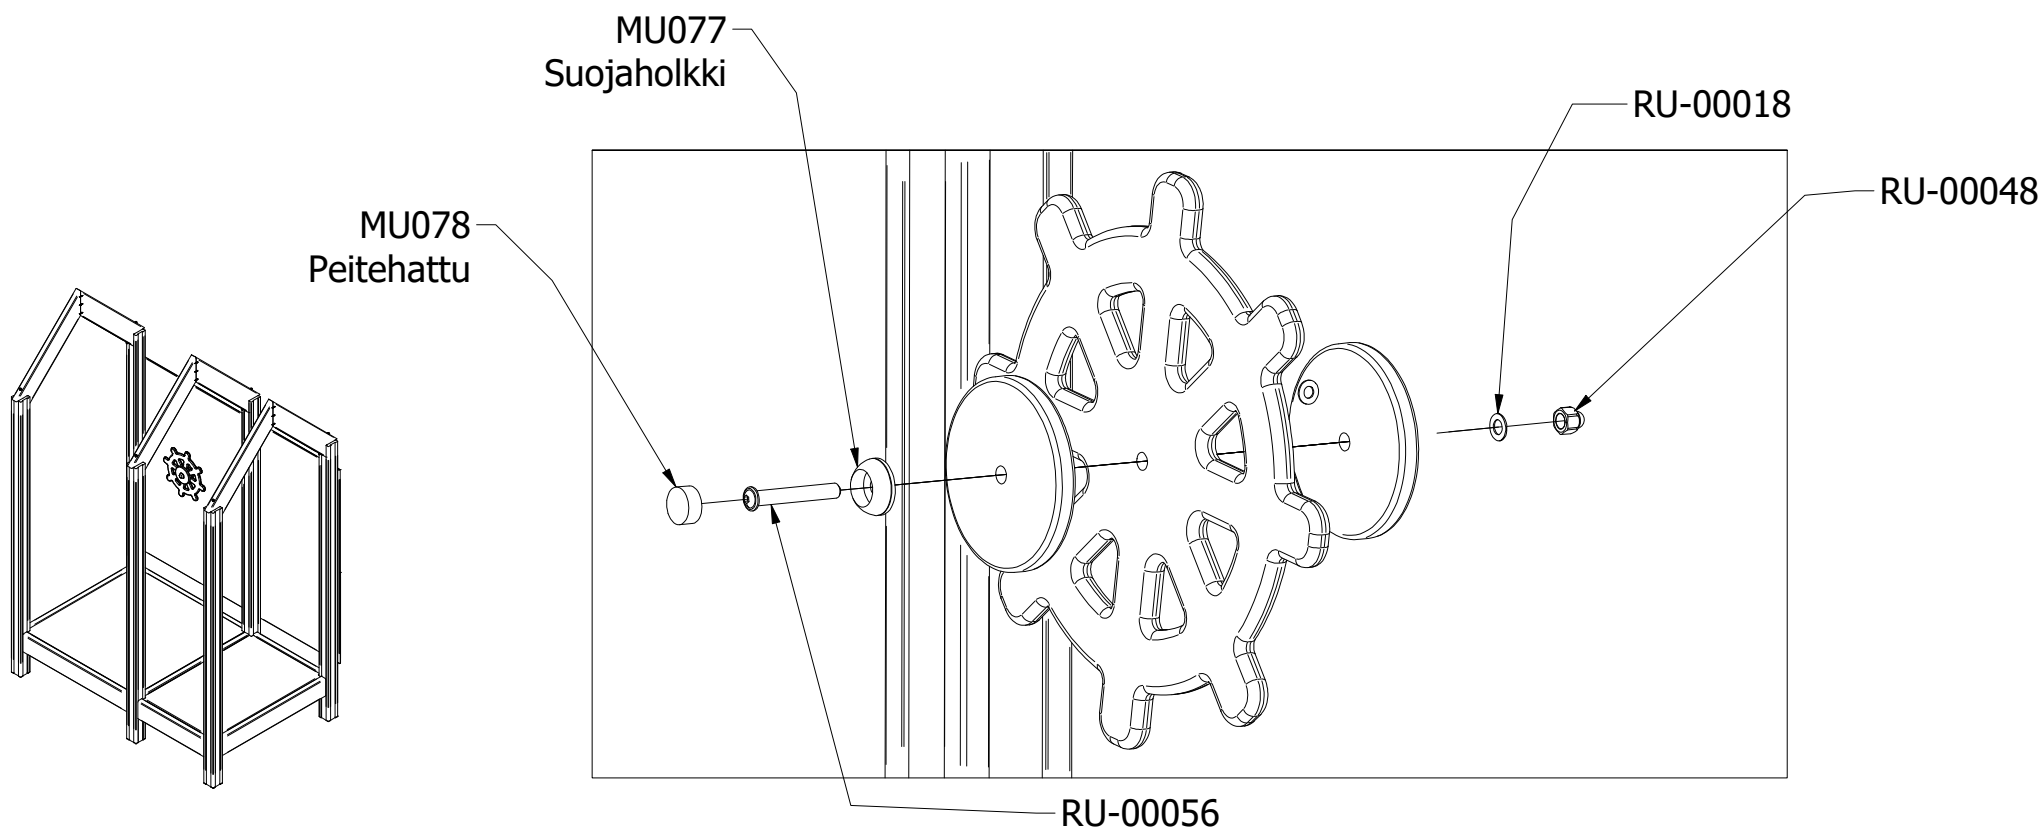


Väliseinän asennus

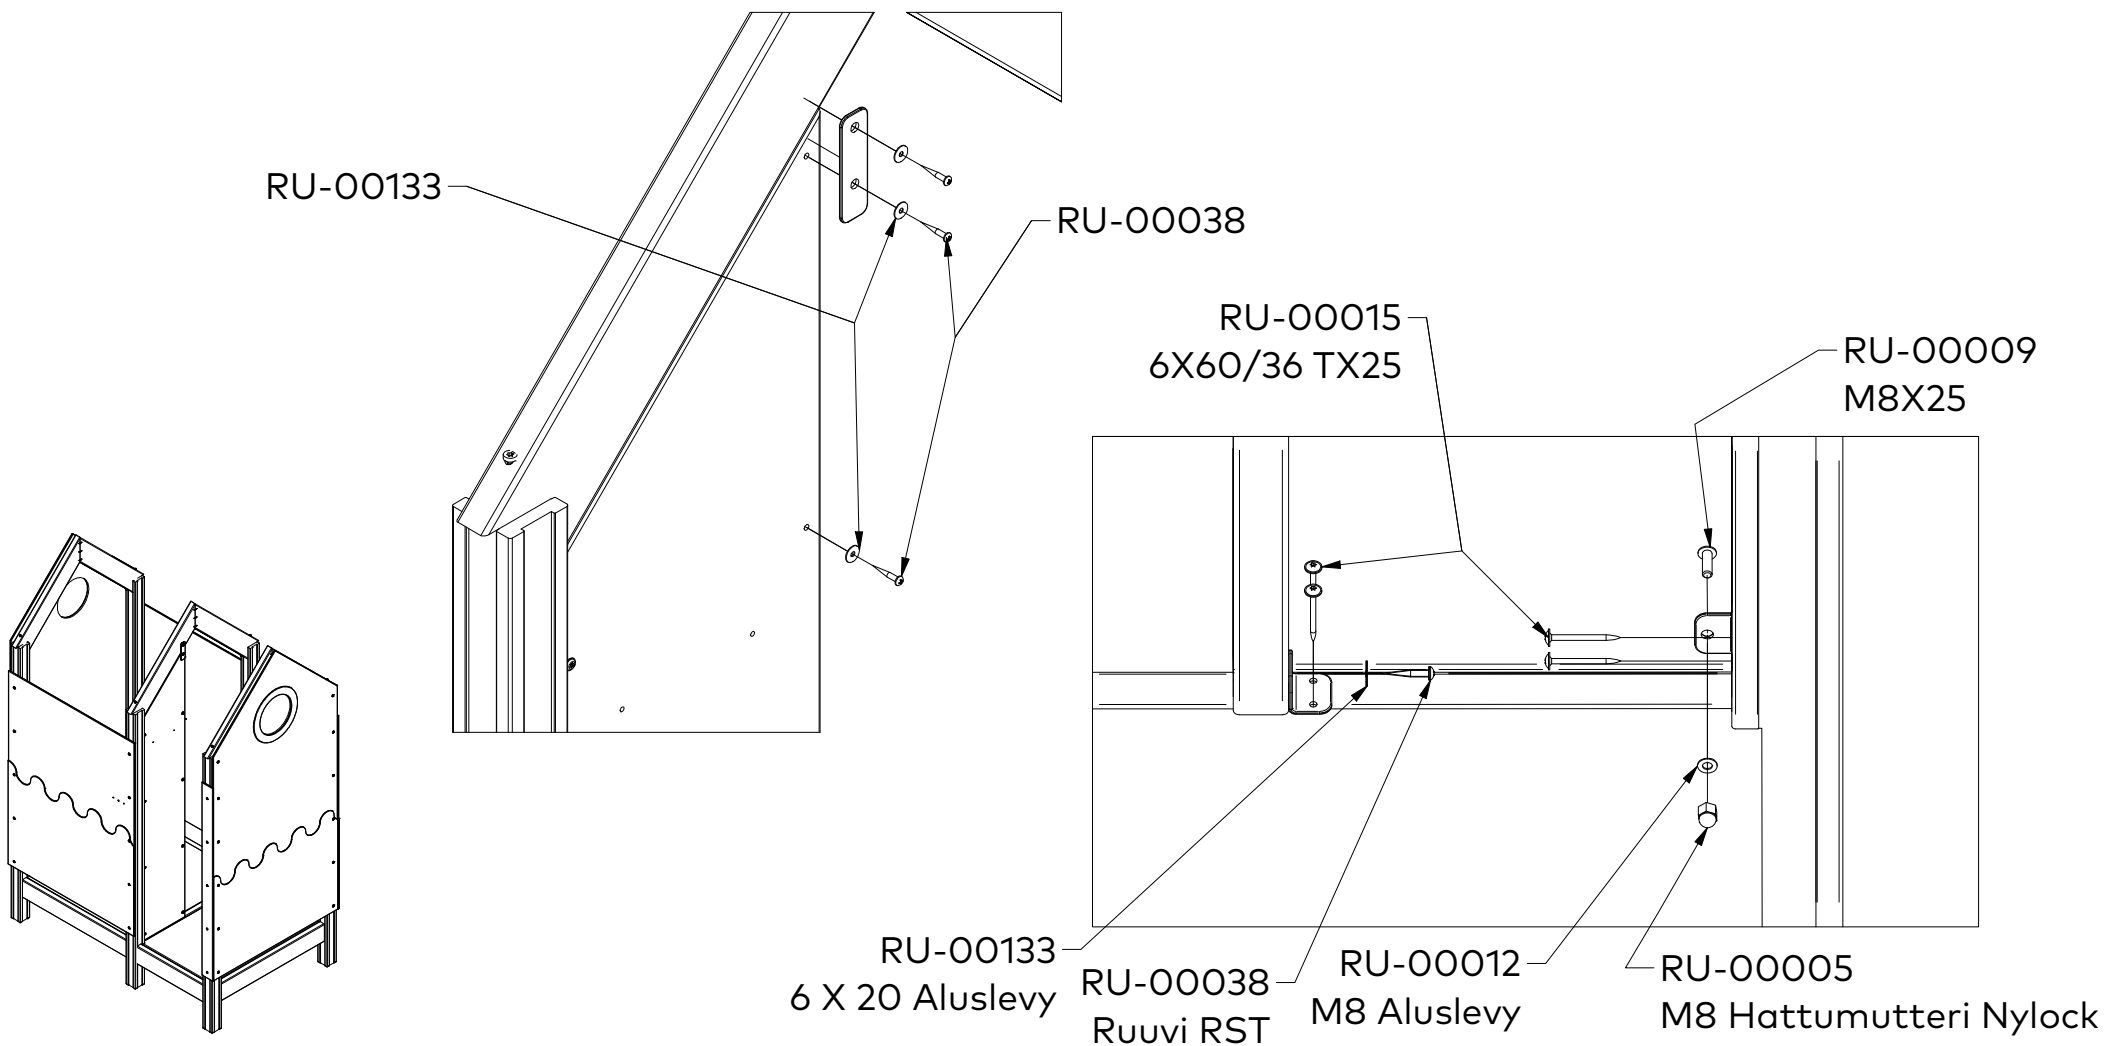


Katon asennus

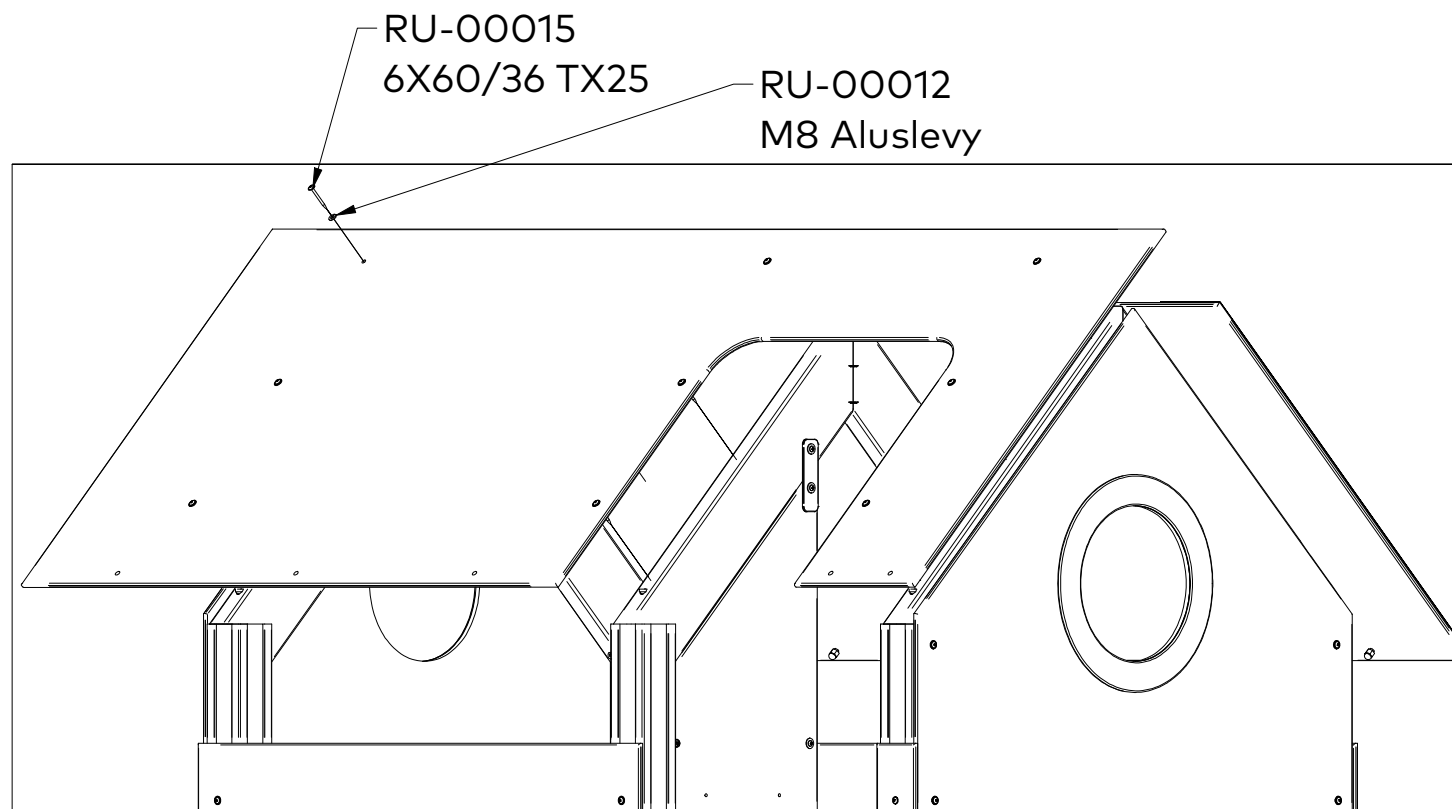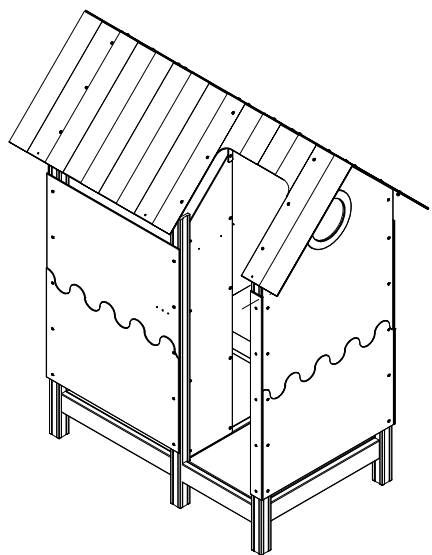

Katon helman asennus

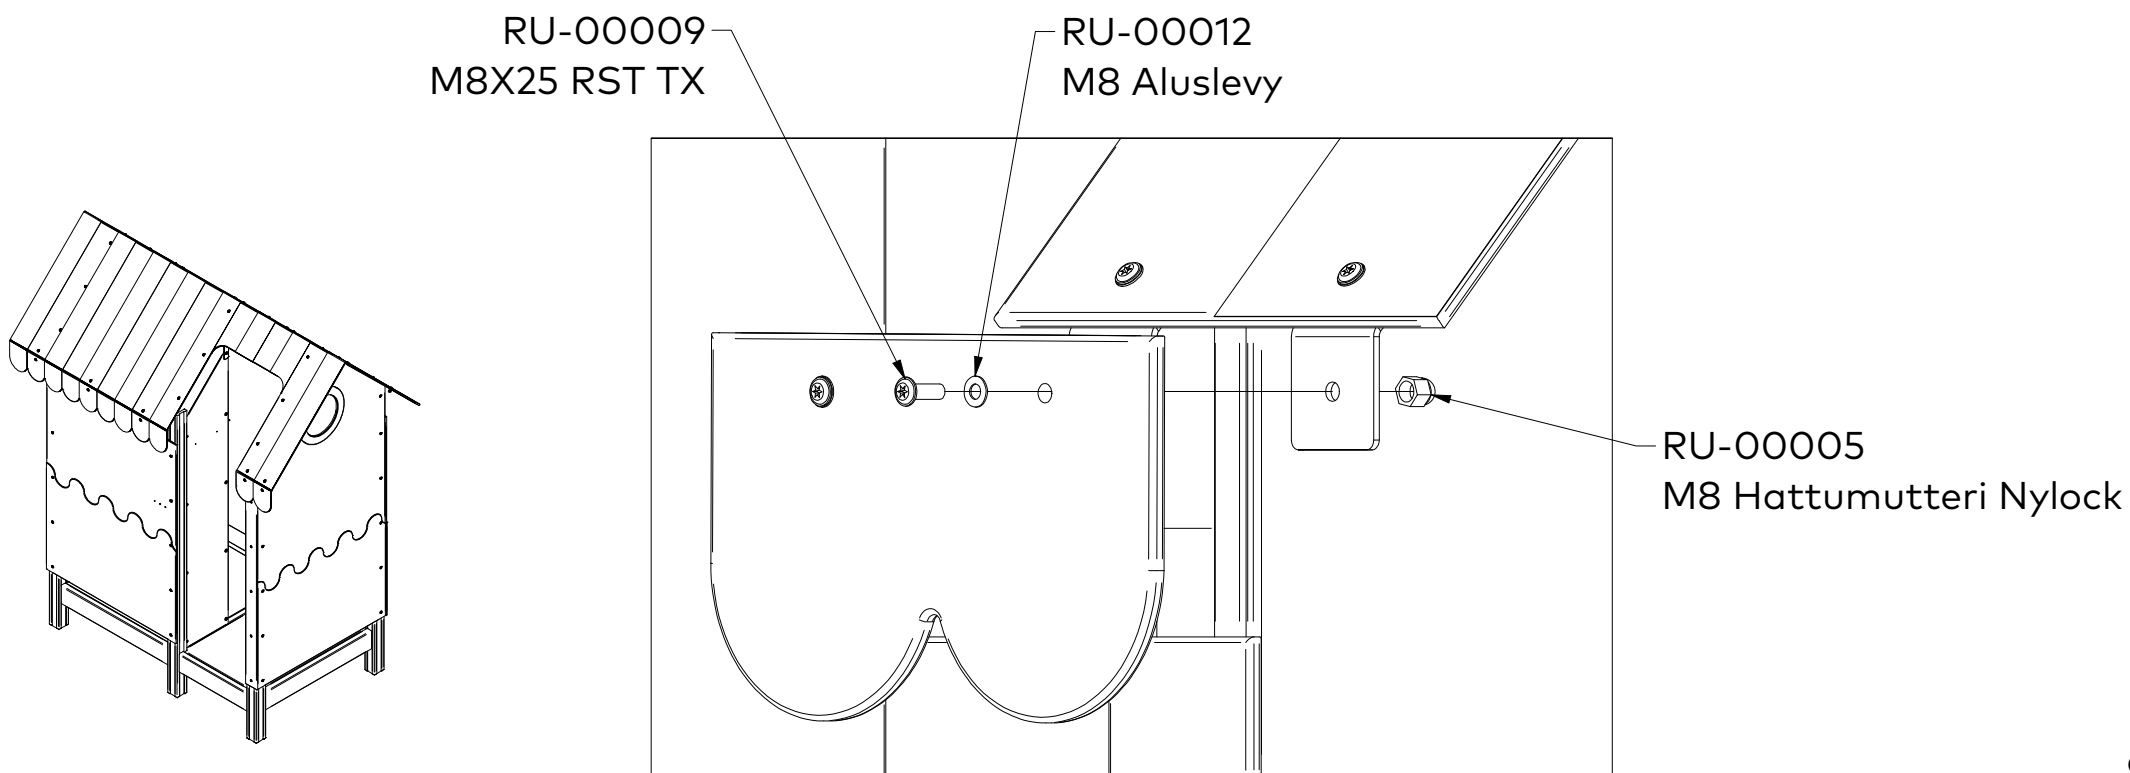

Jakkaran asennus

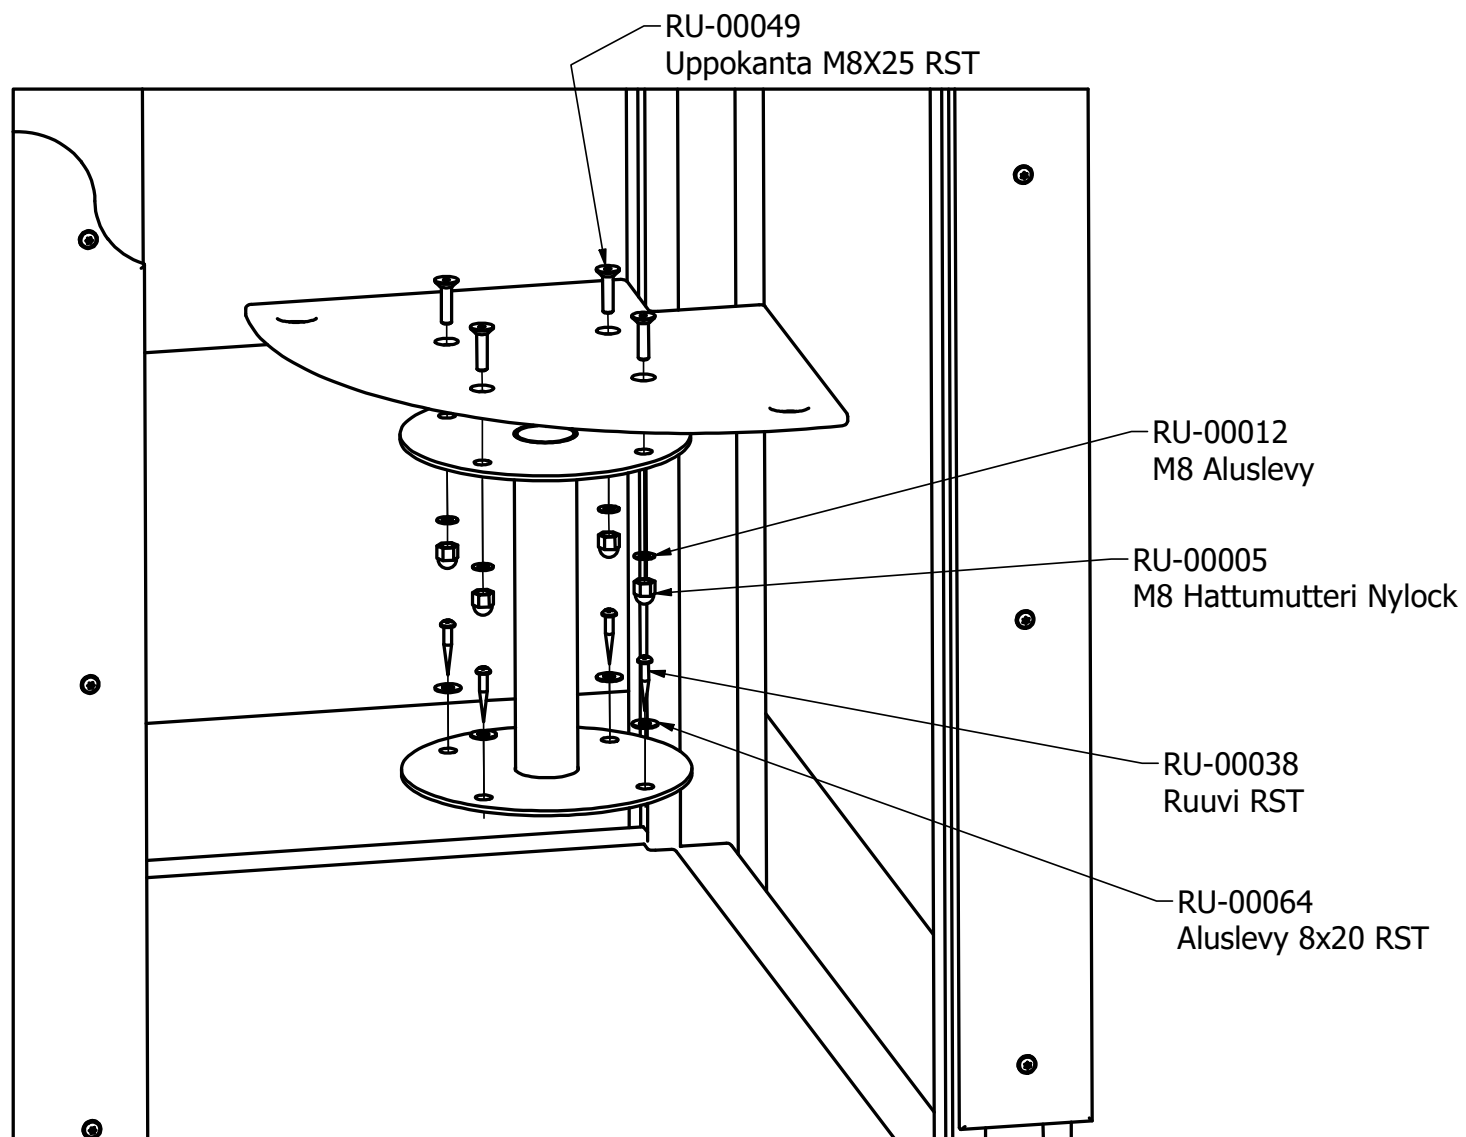

Naulakon asennus

